



Graver Technologies

Filtration | Separation | Purification

PMA™ Polypropylene Filter Series

“Absolute” Rated Pleated Filter Cartridges

This all polypropylene filter retains particles with absolute efficiency. Available in a broad range of pore sizes, it is suitable for a wide range of applications. The pleated construction provides a high surface area to offer outstanding overall filtration economy.

Filter Features–Benefits


- Micron ratings from 0.2 to 100 µm– Broad application range
- Meets current USP Class VI biological test for plastics – Acceptable for food & beverage contact
- “Absolute” Efficiency– Rated at 99.98% (Beta 5000)
- Competitive surface area– High flow rates, and long on-line service– Minimize maintenance cost
- Fixed pore structure– Eliminates dirt unloading at maximum differential pressure
- Polypropylene Construction– Inert to many process fluids
- Various Gasket/O-Ring materials– Compatible with a variety of fluids
- Manufactured in continuous lengths up to 40 inches

Filter Specifications

Media:	Polypropylene
Inner core:	Polypropylene
End caps:	Polypropylene
Cage:	Polypropylene
Gaskets/O-Rings:	Buna-N, EPDM, Silicone, Viton, Teflon Encapsulated Viton (O-Rings only)
Polypropylene micron ratings:	0.2, 0.45, 1.0, 2.5, 5.0, 10, 25, 50, 100µm

Dimensions and Operating Parameters

Nominal lengths:	9.75", 10", 20", 30", 40" (24.7, 25.4, 50.8, 76.2, 101.6 cm)
Outside diameter:	2.7" (6.86 cm)
Inside diameter:	1.1" (2.79 cm)
Maximum operating temperature:	176 °F (80 °C)
Maximum differential pressure:	75 psid @ 70 °F (5.2 bar @ 21°C) 40 psid @ 176 °F (2.8 bar @ 80°C)
Recommended change-out pressure for disposal:	35 psid (2.4 bar)

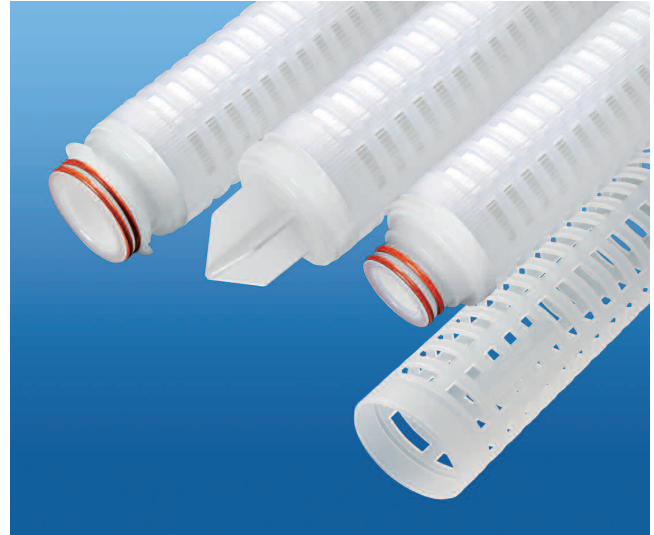

Filter Removal Efficiency

Beta Ratio Efficiency	Beta 5000 99.98%	Beta 100 99%	Beta 50 98%
0.2 micron	0.20	0.10	0.05
0.45 micron	0.45	0.30	0.20
1.0 micron	1.0	0.60	0.30
2.5 microns	2.5	2.0	1.5
5.0 microns	5.0	4.0	3.0
10.0 microns	10.0	8.0	7.0
25.0 microns	25.0	19.0	15.0
50.0 microns	45.0	35.0	28.0
100.0 microns	–	100.0	85.0

$$\text{Beta Ratio} = \frac{\text{Upstream particle counts}}{\text{Downstream particle counts}}$$

The micron ratings shown at various efficiency and beta ratio value levels were determined through laboratory testing, and can be used as a guide for selecting cartridges and estimating their performance. Under actual field conditions, results may vary somewhat from the values shown due to the variability of filtration parameters. Testing was conducted using the single-pass test method, water at 3 gpm/10" cartridge. Contaminants included latex beads, coarse and fine test dust. Removal efficiencies were determined using dual laser source particle counters.


FDA Compliance

All polypropylene material used in manufacturing complies with the regulations of the Food and Drug Administration (FDA) title 21 of the Code of Federal Regulations Sections 174.5, 177.1520, and 177.1630, as applicable for food and beverage contact.

PMA Nomenclature Information

<p>PMA</p> <p>Filter Type PMA Series Filters</p>	<p>2.5</p> <p>Retention Rating (microns) 0.2 0.45 1 2.5 5 10 25 50 100</p>	<p>-10</p> <p>Nominal Length (inches) -9.75 -10 -20 -30 -40</p>	<p>P</p> <p>V</p> <p>Gasket or O-Ring S Silicone B Buna-N E EPDM V Viton T Teflon encap. Teflon (O-Rings only) T Teflon gasket</p> <p>End Configuration P Double Open End P2 226/Flat Single Open End P3 222/Flat Single Open End P7 226/Fin Single Open End P8 222/Fin Single Open End AM Single open end, internal O-Ring</p>
--------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example: PMA 2.5-10 PV

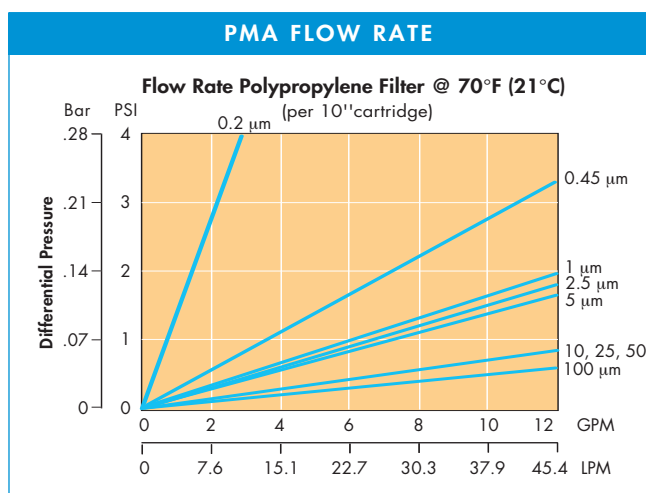

For more information

Graver Technologies Customer Service: **1-888-353-0303**

Technical Support: **1-800-510-0932**

E-mail us at info@gravertech.com

Graver Technologies Europe (UK): **+44-1424-777791**

All information and recommendations appearing in this bulletin concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Graver Technologies as to the effects of such use or the results to be obtained. Graver Technologies assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.

PMA is a trademark of Graver Technologies, LLC.

DISTRIBUTED BY:



Pureworld Solutions Inc.

Vancouver Office:
4916 River Reach,
Delta, BC, V4K 4A4

T: 604-878-8092
info@pureworld.ca
www.pureworld.ca



Graver Technologies

200 Lake Drive
Glasgow,
DE 19702 U.S.A.

302-731-1700
800-249-1990
Fax: 302-369-0938

e-mail: info@gravertech.com
web site: www.gravertech.com

